

2-Finger-parallel gripper

GSP-P 08 - 40

Assembly and Operating Manual



Imprint

Copyright:

This manual remains the copyrighted property of SCHUNK GmbH & Co. KG. It is solely supplied to our customers and operators of our products and forms part of the product. This documentation may not be duplicated or made accessible to third parties, in particular competitive companies, without our prior permission.

Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

Document number: 0389033

Edition: 01.00 |05/10/2015|en

© SCHUNK GmbH & Co. KG

All rights reserved.

Dear customer,

congratulations on choosing a SCHUNK product. By choosing SCHUNK, you have opted for the highest precision, top quality and best service.

You are going to increase the process reliability of your production and achieve best machining results – to the customer's complete satisfaction.

SCHUNK products are inspiring.

Our detailed assembly and operation manual will support you.

Do you have further questions? You may contact us at any time – even after purchase.

Kindest Regards

Yours SCHUNK GmbH & Co. KG

Spann- und Greiftechnik

Bahnhofstr. 106 – 134

D-74348 Lauffen/Neckar

Tel. +49-7133-103-0

Fax +49-7133-103-2399

info@de.schunk.com

www.schunk.com



Reg. No. 003496 QM08



Reg. No. 003496 QM08

Table of contents

1	About this manual	4
1.1	Warnings.....	4
1.2	Applicable documents	5
1.3	Variants.....	5
2	Basic safety notes	6
2.1	Intended use.....	6
2.2	Not intended use	6
2.3	Environmental and operating conditions.....	6
2.4	Product safety.....	7
2.4.1	Protective equipment	7
2.4.2	Demands on the top jaws	7
2.4.3	Constructional changes, attachments, or modifications.....	7
2.5	Personnel qualification.....	7
2.6	The use of personal protective equipment.....	8
2.7	Notes on particular risks.....	8
3	Warranty	10
4	Scope of delivery	11
5	Accessories	11
6	Technical data	12
7	Assembly	13
7.1	Mechanical connection	13
7.2	Air connection	14
7.3	Sensors.....	15
7.3.1	Programmable magnetic switch (MMS-P)	16
7.3.2	Proximity switch ST4 and ST4-2P	20
8	Trouble shooting	21
8.1	Product does not move	21
8.2	Product does not travel through the entire stroke.....	21
8.3	Product opens or closes abruptly.....	21
8.4	Magnetic switch does not work	22
8.5	Gripping force drops.....	22
8.6	Product does not achieve the opening and closing times	22
9	Maintenance and Care	23
10	Translation of original declaration of incorporation	24





1 About this manual

This instruction is an integral part of the product and contains important information for a safe and proper assembly, commissioning, operation, maintenance and help for easier trouble shooting.

Before using the product, read and note the instructions, especially the chapter "Basic safety notes".

1.1 Warnings

To make risks clear, the following signal words and symbols are used for safety notes.

	⚠ DANGER Danger for persons. Non-compliance will inevitably cause irreversible injury or death.
	⚠ WARNING Dangers for persons. Ignoring a safety note like this can lead to irreversible injury and even death.
	⚠ CAUTION Dangers for persons. Non-observance can cause minor injuries.
	NOTICE Material damage Information about avoiding material damage.

1.2 Applicable documents

- General terms of business
- Catalog data sheet of the purchased product
- Assembly and Operating manuals of the accessories

The documents listed here, can be downloaded on our homepage www.schunk.com

1.3 Variants

This operating manual applies for the following variations

- GSP-P without gripping force maintenance
- GSP-P with gripping force maintenance device "Außengreifend" (AS or NC)
- GSP-P with gripping force maintenance device "Innengreifend" (IS or NO)

2 Basic safety notes

2.1 Intended use

The product was designed to grip and to temporarily and securely hold workpieces and objects.

The product is intended for installation in a machine/system. The requirements of the applicable guidelines must be observed and complied with.

The product may be used only in the context of its defined application parameters ([👉 6, Page 12](#)).

The product is designed for industrial use.

To use this unit as intended, it is also essential to observe the technical data and installation and operation notes in this manual and to comply with the maintenance intervals.

2.2 Not intended use

Use which is not specified as an intended use is for instance when the product is for example used as a pressing tool, stamping tool, lifting tool, guide for tools, cutting tool, tensioning mean, boring tool.

2.3 Environmental and operating conditions

- Make sure that the product and the top jaws are a sufficient size for the application.
- Make sure that the environment is free from splash water and vapors as well as from abrasion or processing dust. Exceptions are products that are designed especially for contaminated environments.

2.4 Product safety

Dangers arise from the product, if:

- the product is not used in accordance with its intended purpose.
- the product is not installed or maintained properly.
- the safety and installation notes are not observed.

Avoid any manner of working that may interfere with the function and operational safety of the product.

Wear protective equipment.

NOTE

More information is contained in the relevant chapters.

2.4.1 Protective equipment

Provide protective equipment per EC Machinery Directive.

2.4.2 Demands on the top jaws

Arrange the top jaws such that when the product is depressurized it can reach one of the end positions either open or closed and therefore no residual energy can be released when changing the top jaws.

2.4.3 Constructional changes, attachments, or modifications

Additional drill holes, threads, or attachments that are not offered as accessories by SCHUNK may be attached only with permission from SCHUNK.

2.5 Personnel qualification

The assembly, initial commissioning, maintenance, and repair of the product may be performed only by trained personnel. Each person called upon by the operator to work on the product must have read and understood the complete assembly and operating manual, especially the chapter "Basic safety notes" ([👉 2, Page 6](#)). This applies particularly to personnel only used occasionally, such as maintenance personnel.

2.6 The use of personal protective equipment

When installing or removing the product, observe the relevant health and safety at work rules and use the required personal protective equipment (protective gloves, safety boots and safety goggles).

2.7 Notes on particular risks

Generally valid:

- Remove the energy supplies before installation, modification, maintenance, or adjustment work.
- Make sure that no residual energy remains in the system.
- Do not move parts by hand when the energy supply is connected.
- Do not reach into the open mechanism or the movement area of the module.
- Perform maintenance, modifications, and additions outside of the danger zone.
- For all work, secure the unit against accidental operation.
- Take a precautionary approach by maintenance and disassembly.
- Only specially trained staff should disassemble the module.



CAUTION

Possible risk of injury due to electrostatic energy!

Components or assembly groups may become electrostatically charged. When touched, the electrostatic discharge can trigger a startle response, which can result in injuries.

- The operator must ensure that all components and assembly groups are included in the local equipotential bonding in line with the applicable regulations.

NOTE

- The equipotential bonding must be installed by a specialist electrician in line with the applicable regulations, paying particular attention to the actual conditions in the working environment.
- The effectiveness of the equipotential bonding must be verified by a specialist electrician through regular safety measurements.

**! WARNING**

Risk of injury due to squeezing and bumping during movement of the gripper jaws and breaking or loosening of the gripper fingers !

**! WARNING**

Risk of injury from objects falling and being ejected

- The danger zone must be surrounded by a safety fence during operation.

**! WARNING**

While disassembling uncontrollable moves of parts of the gripper possible!

**! WARNING**

Risk of injury from objects falling during energy supply failure

Products with a mechanical gripping force maintenance can, during energy supply failure, still move independently in the direction specified by the mechanical gripping force maintenance.

- Secure the end positions of the product with SCHUNK SDV-P pressure maintenance valves.

3 Warranty

If the product is used as intended, the warranty is valid for 24 months from the date of delivery from the production facility under the following conditions:

- Intended use in 1-shift operation
- Observe the mandatory maintenance and lubrication intervals
- Observe the environmental and operating conditions

Parts touching the work piece and wear parts are not part of the warranty.

4 Scope of delivery

The scope of delivery includes

- 2-Finger-parallel gripper GSP-P in the ordered model
- Accessory pack

5 Accessories

A wide range of accessories are available for this product

For information about which accessories can be used with the appropriate product version see catalog.


6 Technical data

Size	08	10	16	20	25	40
Stroke per jaw [mm]	2	3	5	6	8	13
Weight [kg]	0.04	0.07	0.15	0.25	0.46	1.48
Recommended workpiece weight [kg]	0.13	0.29	0.6	1.2	1.9	4.2
Max. permissible finger length [mm]	20	25	32	40	50	64
Max. permitted weight per finger [kg]	0.025	0.04	0.06	0.09	0.12	0.3
Ambient temperature [°C] Min. Max.	+5 +60					
Spring force gripping force maintenance [N] Min. Max.	3 6	8 13	10 25	20 50	40 80	125 125
Closing force [N] without gripping force maintenance with gripping force maintenance AS with gripping force maintenance IS	26 32 -	58 74 -	120 140 -	240 280 -	380 460 -	840 1090 -
Opening force [N] without gripping force maintenance with gripping force maintenance AS with gripping force maintenance IS	36 - 42	70 - 86	138 - 158	280 - 320	438 - 518	928 - 1178
IP rating	40					
Pressure medium	Compressed air, compressed air quality according to ISO 8573-1:7 4 4					
Min. pressure [bar] without gripping force maintenance with gripping force maintenance	2 4.5					
Max. pressure [bar] without gripping force maintenance with gripping force maintenance	8 6.5					

More technical data are included in the catalog data sheet. Whichever is the latest version.

7 Assembly

7.1 Mechanical connection

	<p>! WARNING</p>
	<p>Risk of injury due to unexpected movement of the machine/system! Components may move unexpectedly and cause injuries if the power supply is still on or if there is residual energy in the system left.</p> <ul style="list-style-type: none"> • Switch off power supply. • Ensure that no residual energy remains in the system.


Check the evenness of the bolting surface

The values relate to the entire bolting surface.

Requirements for levelness of the bolting surface (Dimensions in mm)

Diameter	Permissible unevenness
< 100	< 0.02
> 100	< 0.05

Mounting The module can be mounted from the rear or on the side.

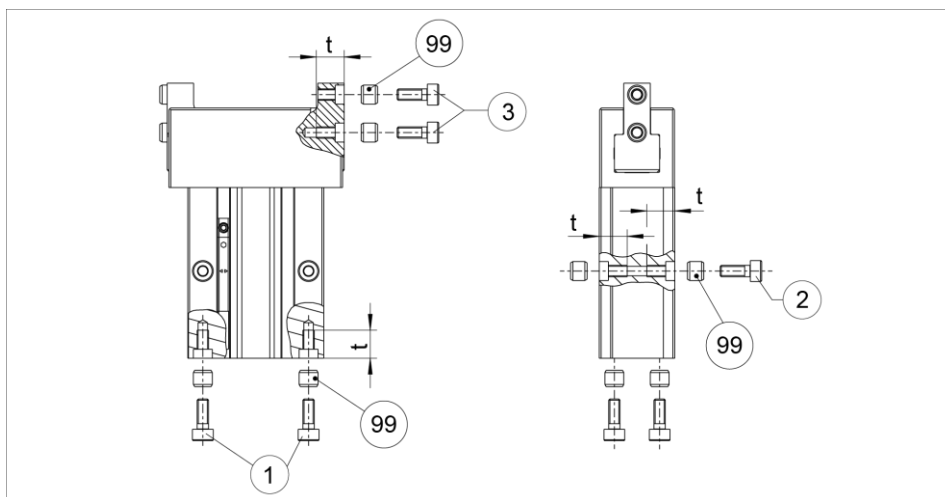

Assembly options

Maximal screw-in depth of the fastening screws provided by the customer.


Mounting material


Item	Mounting	08	10	16	20	25	40
1	Module rear mounting	M3 / 6.5 deep			M4 / 8.5 deep	M5 / 11.5 deep	M8 / 15 deep
2	Module side mounting	M3	M3 / 6.5 deep		M4 / 8.5 deep	M5 / 11.5 deep	M8 / 16 deep
3	Top jaws	M3 / 6.5 deep			M4 / 8.5 deep	M5 / 11.5 deep	M8 / 16 deep
	Centering sleeve	Ø2M6	Ø5K6		Ø7K6	Ø7K6	Ø12K6


NOTE

- Mount the module using the provided centering sleeves (99).
- Mount the module using the mounting bores.
- Mount the top jaws using the provided mounting bores.

7.2 Air connection

	NOTICE
	<p>Damage to the gripper is possible! If the maximum permissible finger weight or the permissible mass moment of inertia of the fingers is exceeded, the gripper can be damaged.</p> <ul style="list-style-type: none"> • A jaw movement always has to be without jerks and bounce. • You must therefore implement sufficient reduction and/or damping. • Observe the diagrams and information in the catalog data sheet.

	NOTICE
	<p>Observe the requirements for the air supply (↩ 6, Page 12).</p>

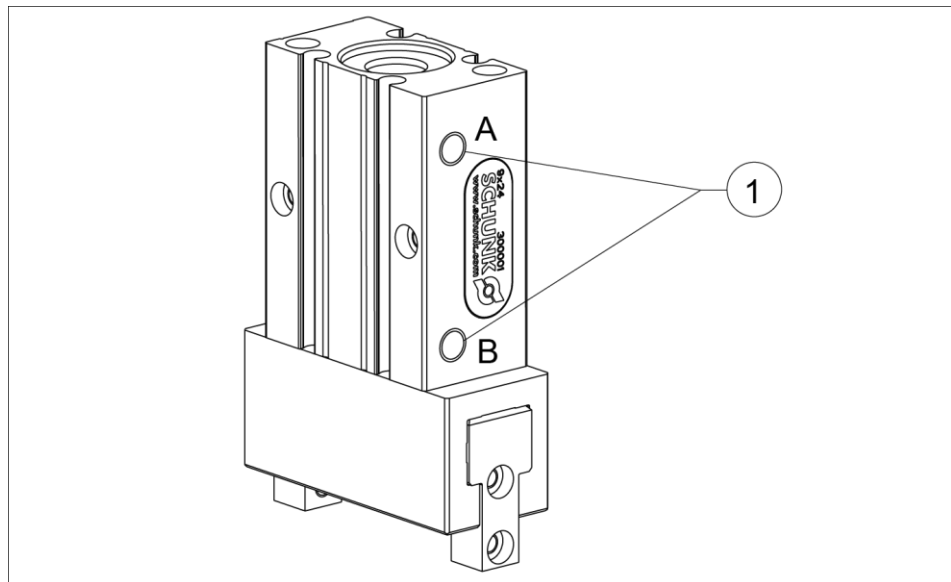

Air connection

Thread diameter of the air connections

Item	Connection	08	10	16	20	25	40
1	Thread diameter of the air connections (A= open, B = closed)	2 x M3		2 x M5			2 x G1/8"

7.3 Sensors

The gripper is ready to be used with the following sensors:


MMS-P sensors and ST4/ST4-2P.

- Sensor MMS-P
 - If you require further information on sensor operation, contact your SCHUNK contact person or download information from www.schunk.com.
 - Technical data of the sensors can be found in the data sheets (included in the scope of delivery or on www.schunk.com).
- Sensor ST4/ST4-2P
 - Information about the operation of sensors is provided by Aventics.
 - Technical data of the sensors can be found in the data sheets.

7.3.1 Programmable magnetic switch (MMS-P)


NOTE

The MMS-P can be used only for sizes GSP-P 08 – GSP-P 40.

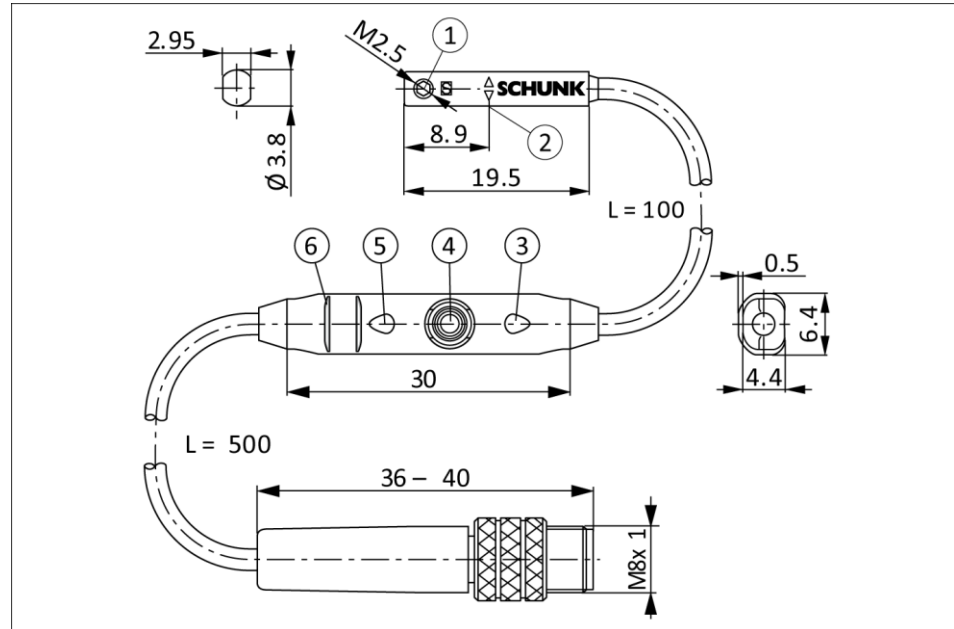

Magnetic switch MMS-P 22

1	Mounting screw	4	Teach-button
2	Center sensor elements	5	LED display
3	LED display	6	Ribs for cable tires

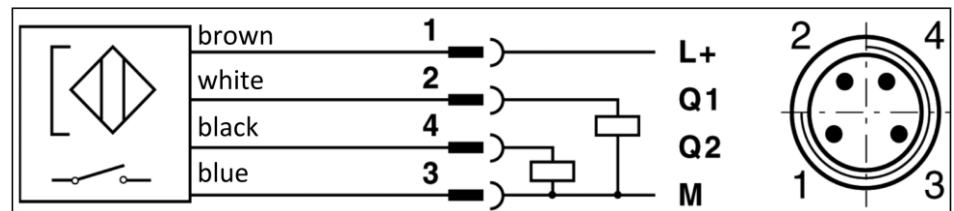

Connection diagram PNP-4 conductor (MMS-P 22)

Types available for order (see catalog):

- MMS-P 22-S-M8-PNP
- MMSK-P 22-S-PNP
- V2-M8-4-2XM8-3

The MMSK-P 22-S-PNP features a cable with open strands so that it can be connected via terminal contacts.

The V2-M8-4-2XM8-3 distributor is used to convert the 4-pin connector plug of the MMS-P 22-S-M8-PNP sensor to two standard M8 plugs with 3 pins each.

Mounting of the sensor



NOTICE

Sensor can be damaged during assembly.


- Do not exceed the maximum tightening torque of 10 Ncm for the set screws!

NOTE


Ferromagnetic material changes the switching positions of the sensor (e.g. Adapter plate made of ordinary steel).

For ferromagnetic adapter plates:


- The module must be first mounted on the adapter plate.
- Then, the position of the magnetic switches has to be set.

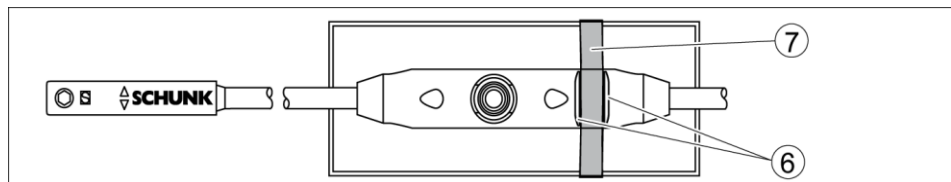

- 1 To relieve the cable, the electronics have to be fixed in place using cable ties (7).
There are ribs (6) in place on the electronics for mounting purposes.

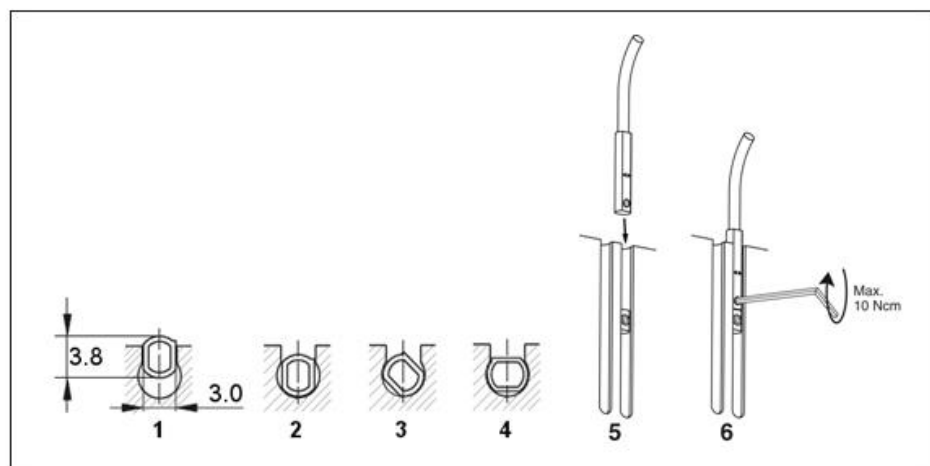

- 2 Turn in the sensor (1 - 4).
OR
Push the sensor axially into the slot until it contacts the stop (5).
- 3 Fix the sensor with an Allen wrench (6).

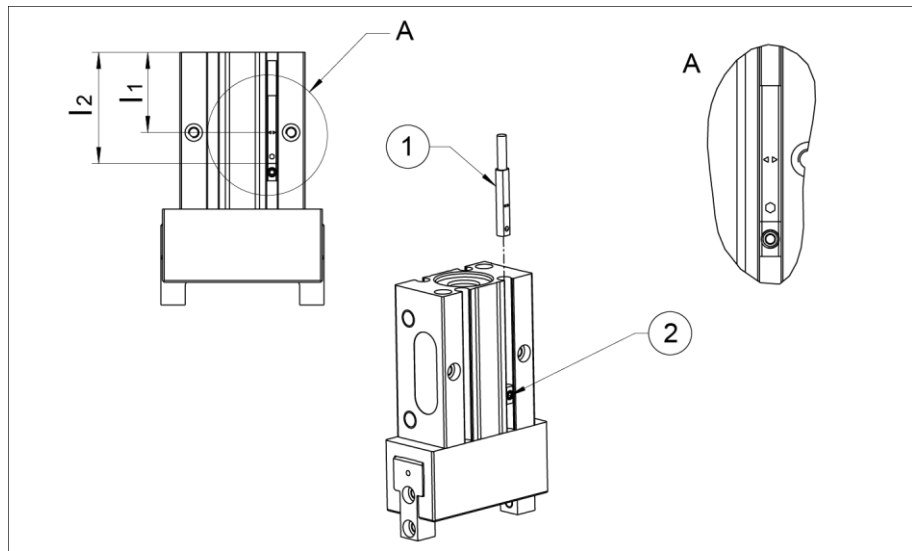

If there is no terminal stop, then slide the magnetic switch according to dimension l_2 (bottom edge of gripper up to front side of sensor) or according to dimension l_1 (bottom edge of gripper up to double arrow on sensor) and then clamp it with an Allen wrench.

Type	Dimension l_1 [mm]	Dimension l_2 [mm]	Type	Dimension l_1 [mm]	Dimension l_2 [mm]
GSP-P 08	19.2	28.1	GSP-P 20-AS	22.1	31
GSP-P 08-AS	14.1	23.0	GSP-P 20-IS	27.1	36
GSP-P 08-IS	22.4	31.3	GSP-P 25	33.6	42.5
GSP-P 10	20.4	29.3	GSP-P 25-AS	25.6	34.5
GSP-P 10-AS	17.9	26.8	GSP-P 25-IS	33.6	42.5
GSP-P 10-IS	20.4	29.3	GSP-P 40	47.8	56.7
GSP-P 16	25.0	33.9	GSP-P 40-AS	31.8	40.7
GSP-P 16-AS	21.0	29.9	GSP-P 40-IS	47.8	56.7
GSP-P 16-IS	25.0	33.9			
GSP-P 20	27.1	36			

Setting up the switching points

- 1 Keep the Teach-Button (4) pressed for 2 seconds.
⇒ After 2 seconds LED 1 (3) is flashing.
- 2 Move the gripper into position 1 (e.g. "open").
- 3 Press the Teach-Button (4) briefly.
⇒ LED 1 (3) lights up and LED 2 (5) is flashing.
- 4 Move the gripper manually into position 2 (z.B. „-2mm“).
⇒ LED 1 (3) should turn off as soon as the switching point 1 is left.

5 The switching points are set.

⇒ LED 2 (5) lights up.

⇒ The switching points are set.

Adjusting the hysteresis

The hysteresis to both switching points will be adjusted automatically corresponding to the characteristics of the magnetic field.

The user can set the switching and triggering points of each position a little bit closer than for the automatic mode. The triggering point is closer to the switching point. At the same time the susceptibility to trouble and damage increases. In the mode of the lowest hysteresis, an error signal (such as jitter or untimely switch off) can be avoided, if the sensor is protected against all types of disturbances (i.e. by shielding). Frequent types of disturbances are change in temperature and electro-magnetic influences.

Within the closest fine-teach mode, SCHUNK cannot guarantee EMC-compatibility any more.

The hysteresis adjustment is used for the manual adjustment of the switching points (if necessary).


In case that the hysteresis automatically determined by the sensor should be too high or too low after “the adjustment of the switching points”, you may correct the value as follows.

The sensor avoids a too small hysteresis during hysteresis adjustment.

The smallest detectable difference in stroke is defined in the following table:

The smallest detectable difference in stroke based on the nominal stroke

For Grippers with X mm nominal stroke per jaw	Min. query range per jaw / min. queried stroke difference per jaw
$X \leq 5\text{mm}$	30% of the nominal stroke per jaw
$X = 5 \text{ to } 10\text{mm}$	20% of the nominal stroke per jaw
$X \geq 10\text{mm}$	10% of the nominal stroke per jaw

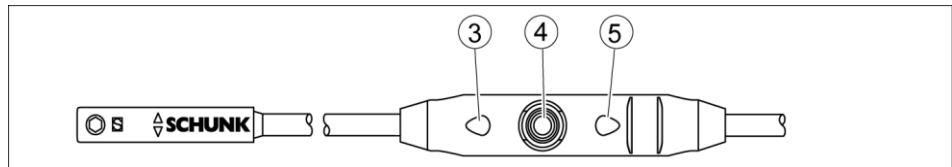

- 1 Press the Teach-Button (4) for 5 seconds.
 - ⇒ LED 1 (3) flashes from the 2nd to the 5th second.
 - ⇒ LED 1 will stop flashing once the 5 seconds are over.
 - 2 Teach-Knopf loslassen.
 - 3 Put the gripper to position „switch-off point of switching point 1“.
 - 4 Press the Teach-Button (4) briefly. LED 1(3) will flash twice.
 - 5 Put the gripper to position „switch-off point of switching point 2“.
 - 6 Press the Teach-Button (4) briefly.
 - ⇒ LED 2 (5) will flash twice.
- ⇒ The mounting of the sensor MMS-P is completed.

7.3.2 Proximity switch ST4 and ST4-2P

The proximity switch ST4 or ST4-2 P by Aventics can be mounted on the gripper. The proximity switches have to be ordered directly from Aventics.

NOTE

For mounting using through bolts, V2A stainless steel bolts must be used instead of ferromagnetic bolts.

Fix the proximity switch ST4 or ST4-2P with the provided centering rings in the intended position, see documentation of the sensors.

8 Trouble shooting

8.1 Product does not move

Possible cause	Corrective action
Base jaws jam in housing, possible cause: bolting surface not sufficiently level.	Check the evenness of the bolting surface (☞ 7.1, Page 13) Loosen the mounting screws of the product and actuate the product again.
Pressure drops below minimum.	Check air supply (☞ 7.2, Page 14)
Compressed air lines switched	Check compressed air lines
Proximity switch defective or set incorrect.	Readjust or change sensor
Unused air connections open	Close unused air connections
Flow control valve closed.	Open the flow control valve.
Component part defective	Exchange product
The aperture angle is limited to 0°.	Check opening angle limitation

8.2 Product does not travel through the entire stroke

Possible cause	Corrective action
Pressure drops below minimum.	Check air supply (☞ 7.2, Page 14)
Screw-on surface is not sufficiently flat	Check the evenness of the bolting surface (☞ 7.1, Page 13)
Component part defective	Exchange product

8.3 Product opens or closes abruptly

Possible cause	Corrective action
Compressed air lines blocked	Check compressed air lines of damage
Screw-on surface is not sufficiently flat	Check the evenness of the bolting surface
One-way flow control valve is missing or adjusted incorrectly	Install and adjust one-way flow control valve
Loading too large	Check the permissible weight and length of the top jaws (☞ 7.1, Page 13)

8.4 Magnetic switch does not work

Possible cause	Corrective action
Steel screws were used to mount the gripper	Use VA-screws
Mounting plates, brackets, etc. from non-magnetic materials	If possible, use aluminium or plastic

8.5 Gripping force drops

Possible cause	Corrective action
Compressed air can escape	Check seals, if necessary replace product.
Pressure drops below minimum.	Check air supply (👉 7.2, Page 14)

8.6 Product does not achieve the opening and closing times

Possible cause	Corrective action
Compressed air lines are not installed optimally	<p>If present: Open the flow control couplings on the module to the maximum that the movement of the jaws occurs without bouncing and hitting.</p> <p>NOTICE! The one way flow control valves must not be removed even when the product has reached the opening and closing times.</p> <p>Check compressed air lines</p> <p>Inner diameters of compressed air lines are of sufficient size in relation to compressed air consumption</p> <p>Keep compressed air lines between the product and directional control valve as short as possible</p> <p>Flow rate of valve is sufficiently large relative to the compressed air consumption.</p>
Loading too large	Check the permissible weight and length of the top jaws

9 Maintenance and Care

The product is not intended for maintenance.

Disassembly for maintenance or repair purposes is not possible.

A damaged product has to be replaced completely.

10 Translation of original declaration of incorporation

in terms of the Directive 2006/42/EG, Annex II, Part 1.B of the European Parliament and of the Council on machinery.

Manufacturer/ SCHUNK GmbH & Co. KG Spann- und Greiftechnik
Distributor Bahnhofstr. 106 – 134
D-74348 Lauffen/Neckar

We hereby declare that on the date of the declaration the following incomplete machine complied with all basic safety and health regulations found in the directive 2006/42/EC of the European Parliament and of the Council on machinery. The declaration is rendered invalid if modifications are made to the product.

Product designation: 2-Finger-parallel gripper / GSP-P 08 - 40 /
ID number 311010; 311011; 311012; 311020; 311021; 311022;
311030;311031; 311032; 311050; 311051; 311052; 311060;
311061; 311062; 311080; 311081; 311082; 30040466

The incomplete machine may not be put into operation until conformity of the machine into which the incomplete machine is to be installed with the provisions of the Machinery Directive (2006/42/EC) is confirmed.

Applied harmonized standards, especially:

EN ISO Safety of machinery - General principles for design - Risk assessment
12100:2011-03 and risk reduction

The manufacturer agrees to forward on demand the relevant technical documentation for the partly completed machinery to state offices.

The special technical documents according to Appendix VII, Part B belonging to the incomplete machine have been compiled.

Person authorized to compile the technical documentation:
Robert Leuthner, Address: see manufacturer's address

Signature: see original declaration

Lauffen/Neckar, September 2015

p.p. Ralf Winkler,
Head of Gripping Systems Development