

# 2-finger angular gripper PWG-S

## Assembly and operating manual



## Imprint

### Copyright:

This manual remains the copyrighted property of SCHUNK GmbH & Co. KG. It is solely supplied to our customers and operators of our products and forms part of the product. This documentation may not be duplicated or made accessible to third parties, in particular competitive companies, without our prior permission.

### Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

**Document number:** 0389361

**Edition:** 02.03 | 12/08/2016 | en

© SCHUNK GmbH & Co. KG

All rights reserved.

Dear customer,

congratulations on choosing a SCHUNK product. By choosing SCHUNK, you have opted for the highest precision, top quality and best service.

You are going to increase the process reliability of your production and achieve best machining results – to the customer's complete satisfaction.

SCHUNK products are inspiring.

Our detailed assembly and operation manual will support you.

Do you have further questions? You may contact us at any time – even after purchase.

Kindest Regards

Yours SCHUNK GmbH & Co. KG

Spann- und Greiftechnik

Bahnhofstr. 106 – 134

D-74348 Lauffen/Neckar

Tel. +49-7133-103-0

Fax +49-7133-103-2399

info@de.schunk.com

www.schunk.com



Reg. No. 003496 QM08



Reg. No. 003496 QM08

## Table of contents

<b>1</b>	<b>General</b> .....	<b>5</b>
1.1	About this manual .....	5
1.1.1	Presentation of Warning Labels.....	5
1.1.2	Applicable documents.....	6
1.1.3	Sizes.....	6
1.2	Warranty.....	6
1.3	Scope of delivery .....	6
1.4	Accessories .....	6
<b>2</b>	<b>Basic safety notes</b> .....	<b>7</b>
2.1	Intended use.....	7
2.2	Not intended use.....	7
2.3	Constructional changes .....	7
2.4	Spare parts.....	7
2.5	Gripper fingers .....	8
2.6	Environmental and operating conditions.....	8
2.7	Personnel qualification.....	8
2.8	Personal protective equipment.....	9
2.9	Notes on safe operation.....	10
2.10	Transport .....	10
2.11	Malfunctions.....	10
2.12	Disposal.....	11
2.13	Fundamental dangers.....	11
2.13.1	Protection during handling and assembly .....	11
2.13.2	Protection during commissioning and operation .....	12
2.13.3	Protection against dangerous movements.....	12
2.14	Notes on particular risks.....	13
<b>3</b>	<b>Technical data</b> .....	<b>14</b>
<b>4</b>	<b>Assembly</b> .....	<b>15</b>
4.1	Mechanical connection .....	15
4.2	Pneumatic connection.....	16
4.3	Mounting the sensors.....	17
<b>5</b>	<b>Troubleshooting</b> .....	<b>20</b>
5.1	Product does not move .....	20
5.2	The product is not executing the complete stroke .....	20
5.3	The gripping force is dropping .....	20
<b>6</b>	<b>Maintenance</b> .....	<b>21</b>

## Table of contents

---

6.1	Notes.....	21
6.2	Maintenance interval .....	21
6.3	Lubricants/Lubrication points (basic lubrication) .....	21
6.4	Disassembling the module .....	22
6.5	Servicing and assembling the module.....	23
6.5.1	Assembly with assembly bolt.....	24
6.6	Sealing kit.....	25
6.7	Sealing kit.....	25
6.8	Assembly drawing.....	26
<b>7</b>	<b>Translation of original declaration of incorporation.....</b>	<b>27</b>
7.1	Annex to Declaration of Incorporation .....	28

# 1 General

## 1.1 About this manual

This manual contains important information for a safe and appropriate use of the product.

This manual is an integral part of the product and must be kept accessible for the personnel at all times.





Before starting work, the personnel must have read and understood this operating manual. Prerequisite for safe working is the observance of all safety instructions in this manual.

Illustrations in this manual are provided for basic understanding and may differ from the actual product design.

In addition to these instructions, the documents listed under [\(☞ 1.1.2, Page 6\)](#) are applicable.

### 1.1.1 Presentation of Warning Labels

To make risks clear, the following signal words and symbols are used for safety notes.

	<p><b>⚠ DANGER</b></p> <p><b>Danger for persons!</b> Non-observance will inevitably cause irreversible injury or death.</p>
	<p><b>⚠ WARNING</b></p> <p><b>Dangers for persons!</b> Non-observance can lead to irreversible injury and even death.</p>
	<p><b>⚠ CAUTION</b></p> <p><b>Dangers for persons!</b> Non-observance can cause minor injuries.</p>
	<p><b>NOTICE</b></p> <p><b>Material damage!</b> Information about avoiding material damage.</p>

### 1.1.2 Applicable documents

- General terms of business \*
- Catalog data sheet of the purchased product \*
- Assembly and Operating manuals of the accessories \*

The documents marked with an asterisk (\*) can be downloaded on our homepage [www.schunk.com](http://www.schunk.com).

### 1.1.3 Sizes

This operating manual applies to the following sizes:

- PWG-S 40
- PWG-S 60
- PWG-S 80

## 1.2 Warranty

If the product is used as intended, the warranty is valid for 24 months from the ex-works delivery date under the following conditions:

- Intended use in 1-shift operation
- Observe the mandatory maintenance and lubrication intervals
- Observe the environmental and operating conditions

Parts touching the work piece and wear parts are not part of the warranty.

## 1.3 Scope of delivery

The scope of delivery includes

- 2-finger angular gripper PWG-S in the version ordered
- Accessory pack

## 1.4 Accessories

A wide range of accessories are available for this product

For information about which accessories can be used with the appropriate product version see catalog.

## 2 Basic safety notes

### 2.1 Intended use

The product is designed exclusively for gripping and temporarily holding workpieces or objects.

- The product may only be used within the scope of its technical data, ([👉 3, Page 14](#)).
- The product is intended for installation in a machine/system. The applicable guidelines must be observed and complied with.
- The product is intended for industrial use.
- Appropriate use of the product includes compliance with all instructions in this manual.

### 2.2 Not intended use

It is not intended use if the product is used, for example, as a pressing tool, stamping tool, lifting gear, guide for tools, cutting tool, clamping device or a drilling tool.

- Any utilization that exceeds or differs from the appropriate use is regarded as misuse.

### 2.3 Constructional changes

#### Making constructional changes

Modifications, constructional changes and subsequent work, e.g. additional threads, drill holes and safety devices may impair the operation and safety or damage the product.

- Constructional changes may only be done with SCHUNK's permission.

### 2.4 Spare parts

#### Use of unauthorised spare parts

Using unauthorised spare parts can endanger personnel and damage the product or cause it to malfunction.

- Use only original spare parts or spares authorised by Schunk.

## 2.5 Gripper fingers

### Requirements for the gripper fingers

Stored energy within the product creates the risk of serious injuries and significant property damage.

- Arrange the gripper fingers in a way that the product reaches either the position "open" or "closed" in a de-energized state.
- Only exchange the gripper fingers when no residual energy remains in the product.

## 2.6 Environmental and operating conditions

### Required ambient conditions and operating conditions

Incorrect ambient and operating conditions can make the product unsafe, leading to the risk of serious injuries, considerable material damage and/or a significant reduction to the product's life span.

- Make sure that the product and the top jaws are a sufficient size for the application.
- Observe Maintenance intervals([☞ 6.2, Page 21](#)).
- Make sure that the environment is free from splash water and vapors as well as from abrasion or processing dust. Exceptions are products that are designed especially for contaminated environments.

## 2.7 Personnel qualification

### Inadequate qualifications of the personnel

If the personnel working with the product is not sufficiently qualified, the result may be serious injuries and significant property damage.

- All work may only be performed by qualified personnel.
- Before working with the product, the personnel must have read and understood the complete assembly and operating manual.
- Observe the national safety regulations and rules and general safety instructions.



The following personal qualifications are necessary for the various activities related to the product:

- Trained electrician** Due to their technical training, knowledge and experience, trained electricians are able to work on electrical systems, recognize and avoid possible dangers and know the relevant standards and regulations.
- Pneumatics specialist** Pneumatics specialists have been trained for this particular area of responsibility and know the relevant standards and regulations.
- Hydraulic specialist** Hydraulic specialists have been trained for this particular area of responsibility and knows the relevant standards and regulations.
- Qualified personnel** Due to its technical training, knowledge and experience, qualified personnel is able to perform the delegated tasks, recognize and avoid possible dangers and knows the relevant standards and regulations.
- Instructed person** Instructed persons were instructed by the operator about the delegated tasks and possible dangers due to improper behaviour.
- Service personnel of the manufacturer** Due to its technical training, knowledge and experience, service personnel of the manufacturer is able to perform the delegated tasks and to recognize and avoid possible dangers.

## 2.8 Personal protective equipment

### Using personal protective equipment

Not wearing personal protective equipment while working with the product, may result in dangers that impact the personnel's safety and health.

- While working with the product, observe the health and safety regulations and wear the required personal safety equipment.
- Observe the valid safety and accident prevention regulations.
- In case of sharp edges and corners and rough surfaces, wear protection gloves.
- In case of hot surfaces, wear heat-resistant protection gloves.
- When dealing with hazardous substances, wear protection gloves and goggles.
- In case of moving parts, wear tight protection clothes.

## 2.9 Notes on safe operation

### **Incorrect handling of the personnel**

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Avoid any manner of working that may interfere with the function and operational safety of the product.
- Use the product as intended.
- Observe the safety notes and assembly instructions.
- Do not expose the product to any corrosive media. This does not apply to products that are designed for special environments.
- Eliminate any malfunction immediately.
- Observe the care and maintenance instructions.
- Observe the current safety, accident prevention and environmental protection regulations regarding the product's application field.

## 2.10 Transport

### **Handling during transport**

Incorrect handling during transport may impair the product's safety and cause serious injuries and considerable material damage.

- When handling heavy weights, use lifting equipment to lift the product and transport it by appropriate means.
- Secure the product against falling during transportation and handling.
- Stand clear of suspended loads.

## 2.11 Malfunctions

### **Behavior in case of malfunctions**

- Immediately remove the product from operation and report the malfunction to the responsible departments/persons.
- Order appropriately trained personnel to rectify the malfunction.
- Do not recommission the product until the malfunction has been rectified.
- Test the product after a malfunction to establish whether it still functions properly and no increased risks have arisen.

## 2.12 Disposal

### Handling of disposal

The incorrect handling of disposal may impair the product's safety and cause serious injuries as well as considerable material and environmental harm.

- Follow local regulations on dispatching product components for recycling or proper disposal.

## 2.13 Fundamental dangers

### General

- Observe safety distances.
- Never deactivate safety installations.
- Install the provided protective product in the danger zone before switching on the product.
- Remove energy supplies before the installation, modification, maintenance or adjustment work. Make sure that no residual energy is remaining in the system.
- Do not move parts by hand while the energy supply is connected.
- Do not reach into the open mechanism or movement area of the product during operation.

### 2.13.1 Protection during handling and assembly

#### Incorrect handling and assembly

Incorrect handling and assembly may impair the product's safety and cause serious injuries and considerable material damage.

- Have all work carried out by appropriately qualified personnel.
- For all work, secure the product against accidental operation.
- Observe the relevant accident prevention rules.
- Use suitable assembly and transport equipment and take precautions to prevent jamming and crushing.

#### Incorrect lifting of loads

Falling loads may cause serious injuries and even death.

- Stand clear of suspended loads and do not step into their swiveling range.
- Never move loads without supervision.
- Do not leave suspended loads unattended.

### 2.13.2 Protection during commissioning and operation

#### Falling or violently ejected components

Falling and violently ejected components can cause serious injuries and even death.

- The danger zone must be cordoned off by a protective barrier.
- Never step into the danger zone during operation.






### 2.13.3 Protection against dangerous movements

#### Unexpected movements

Residual energy in the system may cause serious injuries while working with the product.

- Switch off the energy supply and ensure that no residual energy remains.
- Never rely solely on the response of the monitoring function to avert danger. Until the installed monitors become effective, it must be assumed that the drive movement is faulty, with its action being dependent on the control unit and the current operating condition of the drive. Perform maintenance work, modifications, and attachments outside the danger zone defined by the movement range.
- To avoid accidents and/or material damage, human access to the movement range of the machine must be restricted. Restrict unintentional access by persons to this range e.g. via a protective cover, protective fence or photoelectric barrier. The protective cover and protective fence must be rigid enough to withstand the maximum possible movement energy. EMERGENCY STOP switches must be easily and quickly accessible. Check the function of the EMERGENCY STOP before starting up the machine or system. If this protective equipment is not working properly, prevent the operation of the machine.

## 2.14 Notes on particular risks

	<p><b>⚠ DANGER</b></p> <p><b>Risk of fatal injury from suspended loads!</b> Falling loads can cause serious injuries and even death.</p> <ul style="list-style-type: none"> <li>• Stand clear of suspended loads and do not step within their swiveling range.</li> <li>• Never move loads without supervision.</li> <li>• Do not leave suspended loads unattended.</li> <li>• Wear suitable protective equipment.</li> </ul>
	<p><b>⚠ WARNING</b></p> <p><b>Risk of injury from objects falling and being ejected!</b> Falling and ejected objects during operation can lead to serious injury or death.</p> <ul style="list-style-type: none"> <li>• The danger zone must be cordoned off by a protective barrier.</li> </ul>
	<p><b>⚠ WARNING</b></p> <p><b>Risk of injury from uncontrolled movements!</b> If the energy supply is switched on or residual energy remains in the system, parts may move unexpectedly and cause serious injuries.</p> <ul style="list-style-type: none"> <li>• Switch off energy supply.</li> <li>• Make sure there is no residual energy in the system</li> </ul>
	<p><b>⚠ WARNING</b></p> <p><b>Risk of injury due to squeezing and bumping!</b> Moving the base jaws and breaking or loosening the gripper fingers may cause serious injuries.</p> <ul style="list-style-type: none"> <li>• Do not reach into the product's open mechanical system or movement range.</li> </ul>
	<p><b>⚠ WARNING</b></p> <p><b>Risk of injury from sharp edges and corners!</b> Sharp edges and corners can cause cuts.</p> <ul style="list-style-type: none"> <li>• Use suitable protective equipment.</li> </ul>


### 3 Technical data

Pressure medium	Compressed air, compressed air quality according to ISO 8573-1:7 4 4
Nominal working pressure [bar]	6
Min. pressure [bar]	4
Max. pressure [bar]	8
Ambient temperature [°C]	
Min.	-10°C
Max.	90°C
Noise emission [dB(A)]	≤70

More technical data are included in the catalog data sheet. Which ever is the latest version.

## 4 Assembly

### 4.1 Mechanical connection


	<b>! WARNING</b>
	<p><b>Risk of injury from uncontrolled movements!</b>                  If the energy supply is switched on or residual energy remains in the system, parts may move unexpectedly and cause serious injuries.</p> <ul style="list-style-type: none"> <li>• Switch off energy supply.</li> <li>• Make sure there is no residual energy in the system</li> </ul>

**Levelness of the mounting surface** The values apply to the whole mounting surface to which the product is mounted .

Requirements for levelness of the mounting surface (Dimensions in mm)

Diameter	Permissible unevenness
< 100	< 0.02
> 100	< 0.05

**Mounting** Fasten the gripper to the base surface using four threaded holes. A centering bore and fixing bore are in the base surface in order to position the gripper.

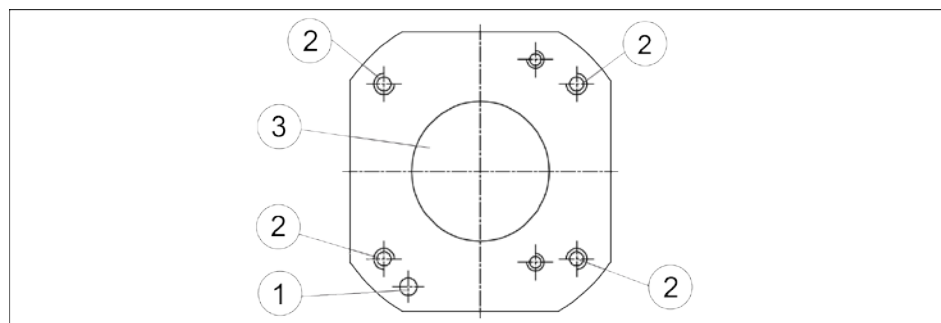

Item	Designation	PWG-S		
		40	60	80
1	Mounting thread	M4	M5	M6
	Max. depth of engagement form locating surface [mm]	10	14	16
2	Centering bore [H7]	Ø20H7	Ø25H7	Ø40H7
3	Fixing bore [H7]	Ø4H7	Ø4H7	Ø5H7

## 4.2 Pneumatic connection



### **! WARNING**

#### **Risk of injury from uncontrolled movements!**

If the energy supply is switched on or residual energy remains in the system, parts may move unexpectedly and cause serious injuries.

- Switch off energy supply.
- Make sure there is no residual energy in the system



### **NOTICE**

#### **Damage to the gripper is possible!**


If the maximum permissible finger weight or the permissible mass moment of inertia of the fingers is exceeded, the gripper can be damaged.

- A jaw movement always has to be without jerks and bounce.
- You must therefore implement sufficient reduction and/or damping.
- Observe the diagrams and information in the catalog data sheet.

### **NOTE**

Observe the requirements for the compressed air supply, ([☞ 3, Page 14](#))

Screw in the seal set-screws **only flush**.

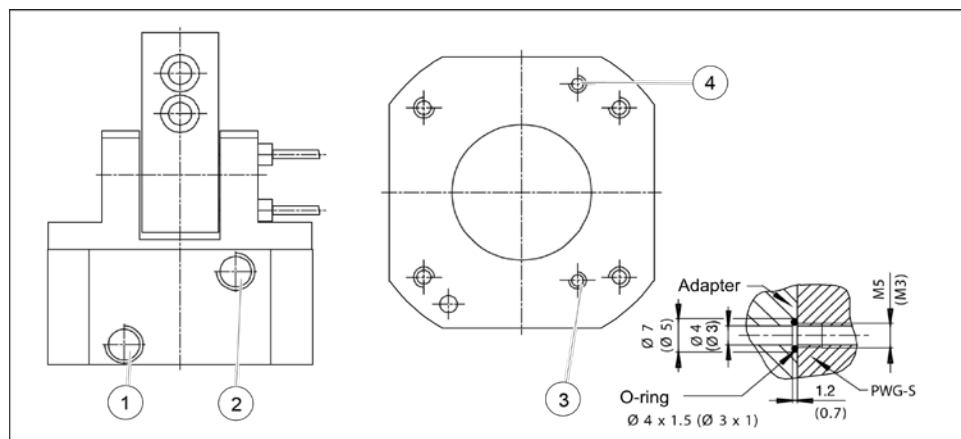

Pneumatic connection




Thread diameter of the air connections

Item	Designation	PWG-S		
		40	60	80
1	Main connections (Hose connection ) (A = open, B = close)	M5	M5	R1/8"
2		M5	M5	R1/8"
3	Hose-free direct connection at the base (a = open, b = close)	M5	M5	M5
4		M5	M5	M5


- Only open the air connections required.
- Seal air connections not required using the locking screws from the enclosed pack.
- For hose-free direct connections use the two O-rings from the enclosed pack.

### 4.3 Mounting the sensors


The gripper is prepared for the application of the IN 40 / IN 60 sensors.

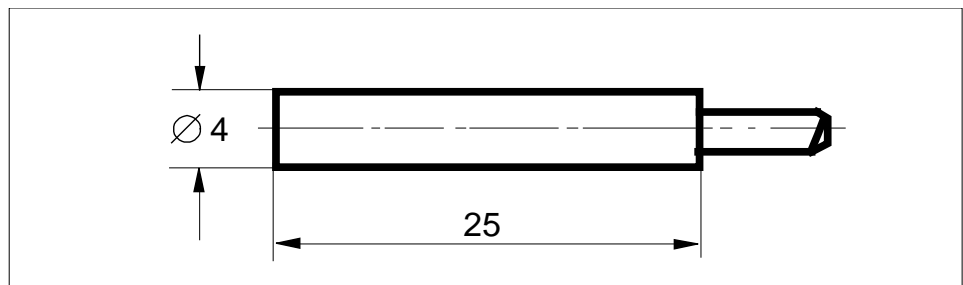

IN 40

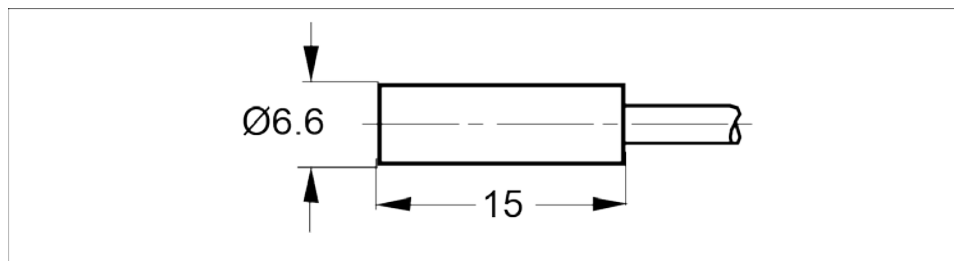

IN 60

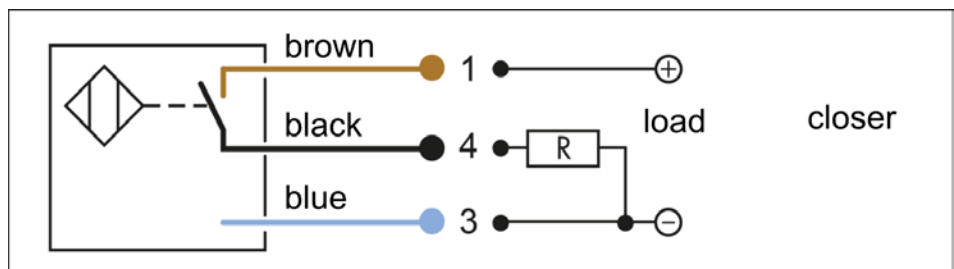

The inductive proximity switches used are equipped with reverse polarity protection and are short-circuit-proof.


Make sure that you handle the proximity switches properly:

- Do not pull on the cable.
- Do not allow the sensor to dangle from the cable.
- Do not overtighten the mounting screw or mounting clip
- Please adhere to a permitted bend radius of the cable (see catalog).
- Avoid contact of the proximity switches with hard objects and with chemicals, in particular nitric acid, chromic acid and sulphuric acid.

The inductive proximity switches are electronic components, which can react sensitively to high-frequency interference or electromagnetic fields.

- Check to make sure that the cable is fastened and installed correctly. Provide for sufficient clearance to sources of high-frequency interference and their supply cables.
- Parallel switching of several sensor outputs of the same type (nnp, pnp) is permissible, but does not increase the permissible load current.
- Note that the leakage current of the individual sensors (approx. 2 mA) is cumulative.
- If you require further information on sensor operation, contact your SCHUNK contact person or download information from our homepage.
- Technical data for the sensors can be found in the data sheets (included in the scope of delivery).

**Assembly of the proximity switch**

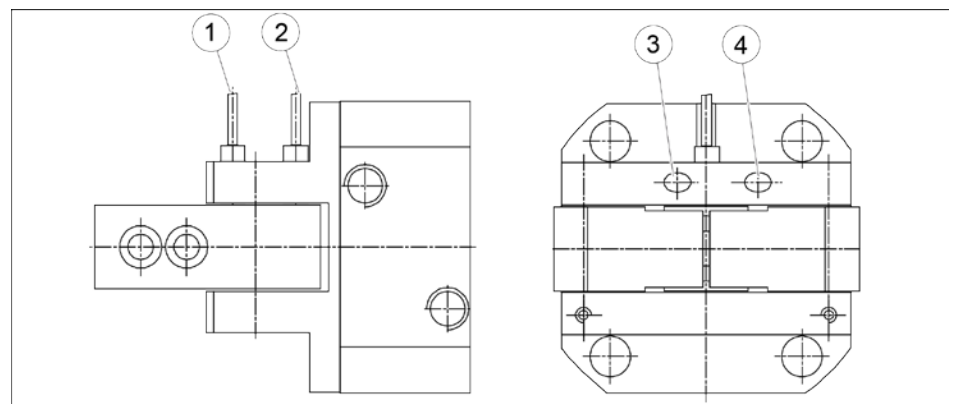

1	Proximity switch "open"	3	attachment screw "open"
2	Proximity switch "closed"	4	attachment screw "closed"

**NOTICE****Risk of damage to the sensor during assembly!**

- Observe a maximum tightening torque of 10 Ncm for the set-screws.

**Gripper open:**

- 1 Set the gripper to "open" position.
- 2 Loosen the attachment screw (3) "open".
- 3 Carefully push the proximity switch (1) into the bracket until it touches the control cam.
- 4 Pull back the proximity switch approx 0.5 mm.
- 5 Fasten the proximity switch by tightening the attachment screw (3).
- 6 Connect the proximity switch.
- 7 Move the gripper into "open" position and test the function.

**Gripper closed:**

- 1 Set the gripper to "closed" position.
- 2 Loosen the attachment screw (3) "closed".
- 3 Carefully push the proximity switch (2) into the bracket until it touches the control cam.
- 4 Pull back the proximity switch approx 0.5 mm.
- 5 Fasten the proximity switch by tightening the attachment screw (4).
- 6 Connect the proximity switch.
- 7 Move the gripper into "closed" position and test the function.

## 5 Troubleshooting

### 5.1 Product does not move

Possible cause	Corrective action
Base jaws jam in housing, possible cause: bolting surface not sufficiently level.	Check the evenness of the bolting surface. ( <a href="#">☞ 4.1, Page 15</a> )
Pressure drops below minimum.	Check air supply ( <a href="#">☞ 3, Page 14</a> ).
Compressed air lines switched.	Check compressed air lines ( <a href="#">☞ 4.2, Page 16</a> ).
Proximity switch defective or set incorrect.	Readjust or change sensor.
Unused air connections open.	Close unused air connections.
Flow control valve closed.	Open the flow control valve.
Component part defective.	Replace component or send it to SCHUNK for repair.

### 5.2 The product is not executing the complete stroke

Possible cause	Corrective action
Dirt deposits between cover and piston.	Clean and if necessary re-lubricate. ( <a href="#">☞ 6, Page 21</a> )
Dirt deposits between basic jaws and guidance.	Disassemble and clean the product.
Pressure drops below minimum.	Check air supply ( <a href="#">☞ 4.2, Page 16</a> ).
Screw-on surface is not sufficiently flat.	Check the evenness of the bolting surface. ( <a href="#">☞ 4.1, Page 15</a> )
Component part defective.	Replace component or send it to SCHUNK for repair.

### 5.3 The gripping force is dropping

Possible cause	Corrective action
Compressed air can escape.	Check seals, if necessary, disassemble the product and replace seals.
To much grease in the mechanical movement space.	Clean and lubricate product. ( <a href="#">☞ 6, Page 21</a> )
Pressure drops below minimum.	Check air supply. ( <a href="#">☞ 4.2, Page 16</a> )
Component part defective.	Replace component or send it to SCHUNK for repair.

## 6 Maintenance

### 6.1 Notes

#### original spare parts

Use only original spare parts of SCHUNK when replacing spare and wear parts.

It is of advantage to have maintenance performed and the seals replaced at SCHUNK. If this is not possible, you can perform the maintenance and replace the seals yourself.

To replace parts, send the complete gripper with a repair order to SCHUNK.

In the case of the PWG-S 80, the piston and body must be aligned and mounted with a device during the assembly.

- Description for the disassembly of the PWG-S ([👉 6.4, Page 22](#))
- Drawing for the construction of the device ([👉 6.8, Page 26](#))
- RM assembly drawings ([👉 6.8, Page 26](#))

### 6.2 Maintenance interval



#### NOTICE

##### Damage caused by insufficient lubricant!

Lubricants harden more quickly at temperatures above 60°C, leading to possible product damage.

- Reduce the lubricant intervals accordingly.

Interval [Mio. cycles]	2
------------------------	---

### 6.3 Lubricants/Lubrication points (basic lubrication)


SCHUNK recommends the lubricants listed.

During maintenance, treat all greased areas with lubricant. Thinly apply lubricant with a lint-free cloth.


Lubricant point	Lubricant
Metallic sliding surfaces	Molykote BR 2 plus, Metaflux- lubricating metal
All seals	Renolit HLT 2
Bores on the piston	

## 6.4 Disassembling the module

Position of the position numbers ([👉 6.8, Page 26](#))

	<b>⚠️ WARNING</b>
	<p><b>Risk of injury from uncontrolled movements!</b>          If the energy supply is switched on or residual energy remains in the system, parts may move unexpectedly and cause serious injuries.</p> <ul style="list-style-type: none"> <li>• Switch off energy supply.</li> <li>• Make sure there is no residual energy in the system</li> </ul>


- 1 Remove the compressed air line.
- 2 Loosen the set-screws (12).
- 3 Push out both bolts (6).
- 4 Pull out the fingers (4) and compensation disks from the side of the body.
- 5 Connect the pressure line to the CLOSED connection and apply air pressure of 6 bar to the gripper.
- 6 Unscrew the countersunk screw (11) and remove the bar (5).
- 7 Depressurize the gripper and remove the pressure line.

	<b>⚠️ WARNING</b>
	<p><b>The body (1) is under spring tension.</b>  <b>Risk of injury due to spring forces!</b>          Strictly adhere to the following instructions. <b>Carefully</b> disassemble the module.</p>

- 8 Clamp the body (1) and cylinder (2) between "a" and "b".
- 9 Remove the screws (10).
- 10 Unclamp slowly until the springs are no longer under tension.
- 11 Remove the body (1).
- 12 Pull the piston (3) out of the cylinder (2)
- 13 Remove all seals according to the sealing kit list.

## 6.5 Servicing and assembling the module


Position of the position numbers ([↗ 6.8, Page 26](#))

	<b>⚠ WARNING</b>
	<p><b>Risk of injury due to spring forces!</b> The lid is under spring tension.</p> <ul style="list-style-type: none"> <li>• Carefully disassemble the product.</li> </ul>

- Maintenance**
- Clean all parts thoroughly and check for damage and wear.
  - Treat all greased areas with lubricant.  
([↗ 6.3, Page 21](#))
  - Oil or grease bare external steel parts.
  - Replace all wear parts / seals.
    - Position of the wearing parts ([↗ 6.8, Page 26](#))
    - Seal kit ([↗ 6.7, Page 25](#))

- Assembly** Assembly takes place in the opposite order to disassembly. Observe the following:
- An assembly bolt is required for the assembly of the PGW-S 80  
([↗ 6.5.1, Page 24](#)).
  - Unless otherwise specified, secure all screws and nuts with Loctite no. 243 and tighten with the appropriate tightening torque.

### 6.5.1 Assembly with assembly bolt

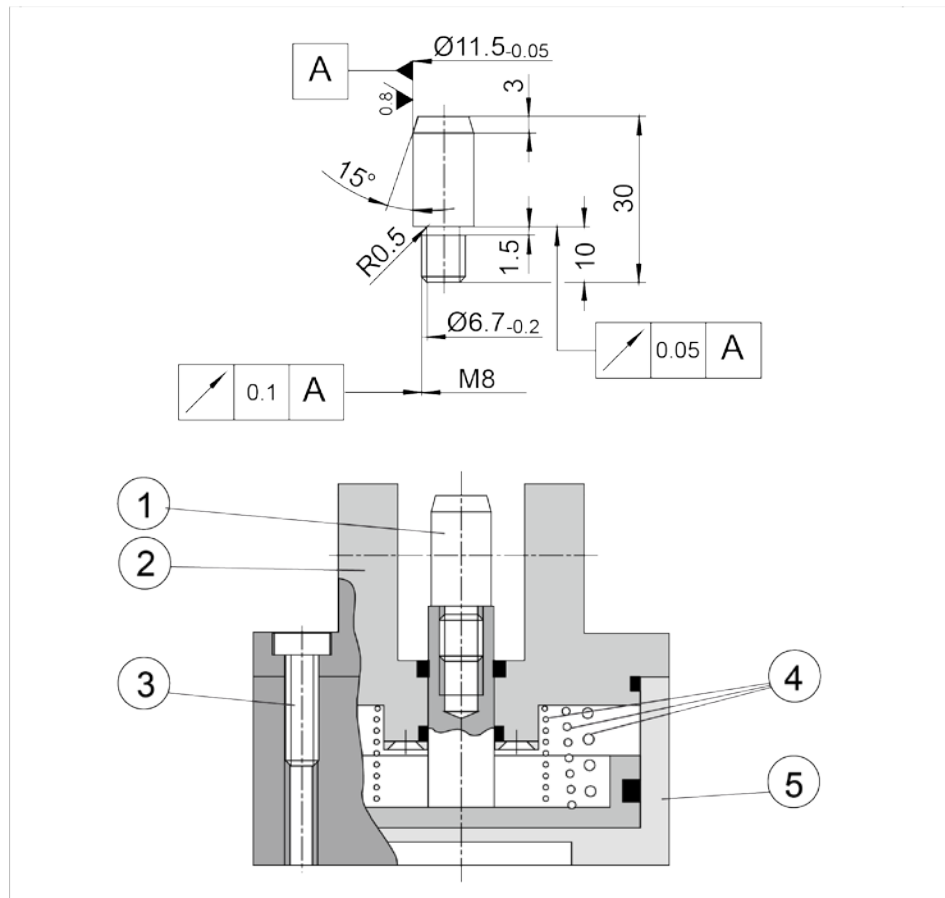

Dimensions and purpose of the assembly bolt

1	Assembly bolt	4	Compression spring
2	Body	5	Cylinder
3	Cylindrical screws		

- 1 Screw in the assembly bolt (1) by hand.
- 2 Press the body (2) onto the cylinder (5).
- 3 Screw in the cylindrical screws (3).



## 6.6 Sealing kit

Content of the accessories pack:

- 2 x O-ring for hose-free direct connection
- 1x cylindrical pin
- **PWG-S 80**: 2 x locking screw for hose connections

ID.-No. of the accessory pack

Accessory pack for	ID number
PWG-S 40	5509449
PWG-S 60	5509450
PWG-S 80	5509451

## 6.7 Sealing kit

Content of the sealing kit:


- 1 x sealing wiper ring
- **PWG-S 40**: 1 x sealing wiper ring (PUR)
- **PWG-S 40**: 3 x O-rings for hose-free direct connection:  
**PWG-S 60-80**: 4 x O-rings for hose-free direct connection
- **PWG-S 40/80**: 2 x quad ring  
**PWG-S 60**: 1x quad ring
- **PWG-S 80**: 1 x sealing ring

ID.-No. of the seal kit

Seal kit for	ID number
PWG-S 40	0370550
PWG-S 60	0370551
PWG-S 80	0370552

## 6.8 Assembly drawing

The following figure is an example image.  
 It serves for illustration and assignment of the spare parts.  
 Variations are possible depending on size and variant.

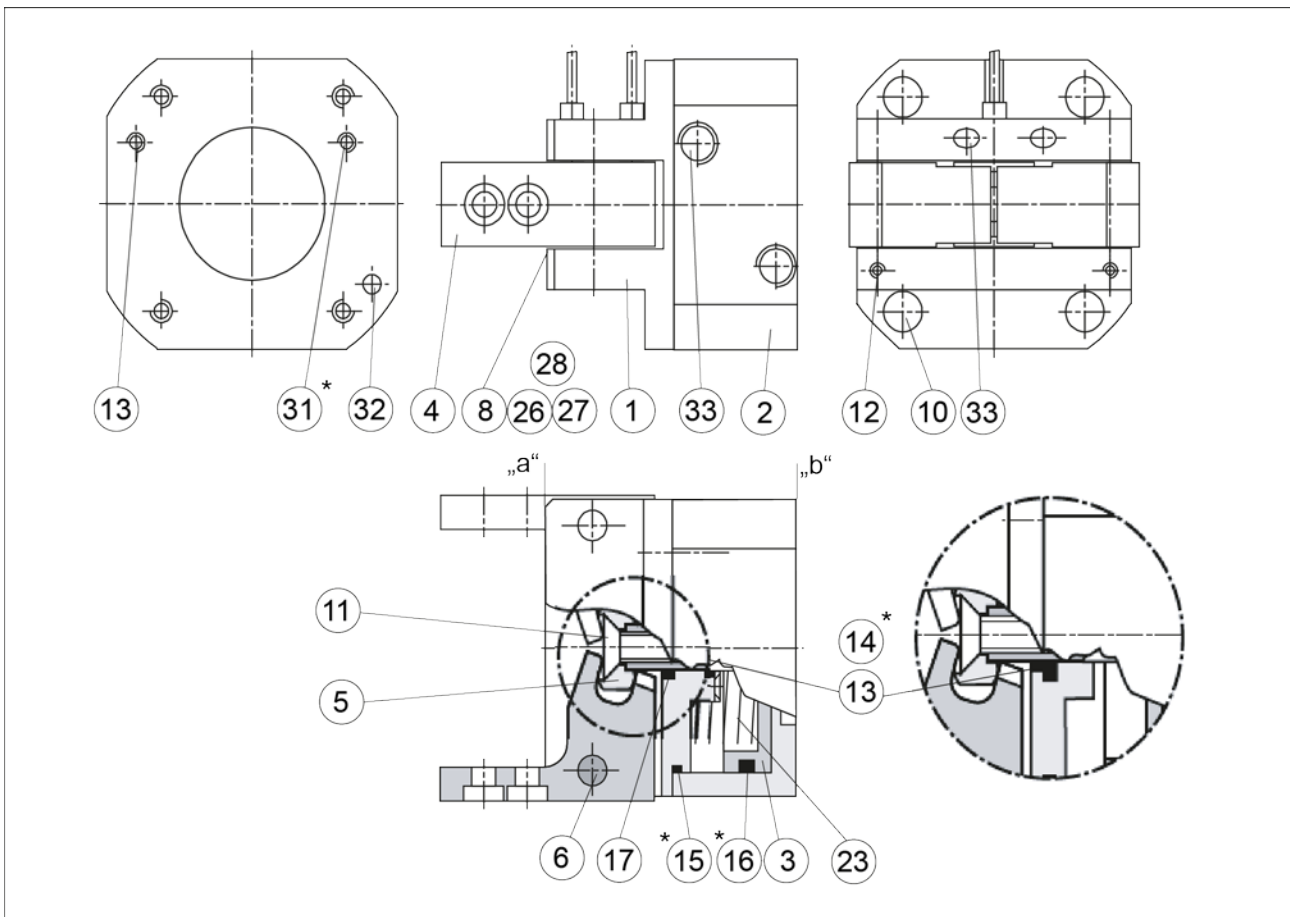

- \* Wearing part, replace during maintenance.  
 Included in the seal kit. Seal kit can only be ordered completely.

## 7 Translation of original declaration of incorporation

in terms of the Directive 2006/42/EG, Annex II, Part 1.B of the European Parliament and of the Council on machinery.

Manufacturer/  
Distributor

SCHUNK GmbH & Co. KG Spann- und Greiftechnik  
Bahnhofstr. 106 – 134  
D-74348 Lauffen/Neckar

We hereby declare that on the date of the declaration the following incomplete machine complied with all basic safety and health regulations found in the directive 2006/42/EC of the European Parliament and of the Council on machinery. The declaration is rendered invalid if modifications are made to the product.

Product designation: 2-finger angular gripper / PWG-S  
ID number 0302611, 0302612, 0302613

The incomplete machine may not be put into operation until conformity of the machine into which the incomplete machine is to be installed with the provisions of the Machinery Directive (2006/42/EC) is confirmed.

Applied harmonized standards, especially:

DIN EN ISO 12100:2011-03 Safety of machinery - General principles for design - Risk assessment and risk reduction

The manufacturer agrees to forward on demand the relevant technical documentation for the partly completed machinery in electronic form to national authorities.

The relevant technical documentation according to Annex VII, Part B, belonging to the partly completed machinery, has been created.

Person authorized to compile the technical documentation:  
Robert Leuthner, Address: see manufacturer's address

*Signature: see original declaration*

Lauffen/Neckar, August 2016

p.p. Ralf Winkler,  
Head of Gripping Systems Development

## 7.1 Annex to Declaration of Incorporation

according 2006/42/EG, Annex II, No. 1 B

1. Description of the essential health and safety requirements pursuant to 2006/42/EC, Annex I that are applicable and that have been fulfilled with:

Product designation	2-finger angular gripper
Type designation	PWG-S
ID number	0302611, 0302612, 0302613

To be provided by the System Integrator for the overall machine	↓
Fulfilled for the scope of the incomplete machine	↓
Not relevant	↓

1.1	Essential Requirements			
1.1.1	Definitions		X	
1.1.2	Principles of safety integration		X	
1.1.3	Materials and products		X	
1.1.4	Lighting		X	
1.1.5	Design of machinery to facilitate its handling		X	
1.1.6	Ergonomics		X	
1.1.7	Operating positions			X
1.1.8	Seating			X

1.2	Control Systems			
1.2.1	Safety and reliability of control systems		X	
1.2.2	Control devices		X	
1.2.3	Starting		X	
1.2.4	Stopping		X	
1.2.4.1	Normal stop		X	
1.2.4.2	Operational stop		X	
1.2.4.3	Emergency stop		X	
1.2.4.4	Assembly of machinery		X	
1.2.5	Selection of control or operating modes		X	
1.2.6	Failure of the power supply			X

<b>1.3</b>	<b>Protection against mechanical hazards</b>			
1.3.1	Risk of loss of stability			X
1.3.2	Risk of break-up during operation			X
1.3.3	Risks due to falling or ejected objects			X
1.3.4	Risks due to surfaces, edges or angles		X	
1.3.5	Risks related to combined machinery			X
1.3.6	Risks related to variations in operating conditions			X
1.3.7	Risks related to moving parts		X	
1.3.8	Choice of protection against risks arising from moving parts			
1.3.8.1	Moving transmission parts		X	
1.3.8.2	Moving parts involved in the process			X
1.3.9	Risks of uncontrolled movements			X
<b>1.4</b>	<b>Required characteristics of guards and protective devices</b>			
1.4.1	General requirements			X
1.4.2	Special requirements for guards			X
1.4.2.1	Fixed guards			X
1.4.2.2	Interlocking movable guards			X
1.4.2.3	Adjustable guards restricting access			X
1.4.3	Special requirements for protective devices			X
<b>1.5</b>	<b>Risks due to other hazards</b>			
1.5.1	Electricity supply		X	
1.5.2	Static electricity	X	X	
1.5.3	Energy supply other than electricity		X	
1.5.4	Errors of fitting		X	
1.5.5	Extreme temperatures			X
1.45.6	Fire			X
1.5.7	Explosion			X
1.5.8	Noise			X
1.5.9	Vibrations			X
1.5.10	Radiation	X		
1.5.11	External radiation	X		
1.5.12	Laser radiation	X		

<b>1.5</b>	<b>Risks due to other hazards</b>			
1.5.13	Emissions of hazardous materials and substances			X
1.5.14	Risk of being trapped in a machine	X		
1.5.15	Risk of slipping, tripping or falling	X		
1.5.16	Lightning	X		
<b>1.6</b>	<b>Maintenance</b>			
1.6.1	Machinery maintenance	X	X	
1.6.2	Access to operating positions and servicing points		X	
1.6.3	Isolation of energy sources		X	
1.6.4	Operator intervention		X	
1.6.5	Cleaning of internal parts		X	
<b>1.7</b>	<b>Information</b>			
1.7.1	Information and warnings on the machinery	X	X	
1.7.1.1	Information and information devices		X	
1.7.1.2	Warning devices		X	
1.7.2	Warning of residual risks	X	X	
1.7.3	Marking of machinery	X		
1.7.4	Instructions	X		
1.7.4.1	General principles for the drafting of instructions	X		
1.7.4.2	Contents of the instructions	X		
1.7.4.3	Sales literature	X		
	<b>The classification from Annex 1 is to be supplemented from here forward.</b>			
2	Supplementary essential health and safety requirements for certain categories of machinery			X
2.1	Foodstuffs machinery and machinery for cosmetics or pharmaceutical products			X
2.2	Portable hand-held and/or guided machinery			X
2.2.1	Portable fixing and other impact machinery			X
2.3	Machinery for working wood and material with similar physical characteristics			X
3	Supplementary essential health and safety requirements to offset hazards due to the mobility of machinery		X	

	<b>The classification from Annex 1 is to be supplemented from here forward.</b>			
4	Supplementary essential health and safety requirements to offset hazards due to lifting operations		X	
5	Supplementary essential health and safety requirements for machinery intended for underground work			X
6	Supplementary essential health and safety requirements for machinery presenting particular hazards due to the lifting of persons		X	X

